

Rinnai

Installation Instructions

FLFHA5FLEX / FLEXLINER03

Flexible Chimney Liner Kit

Suitable for use with

Rinnai Slimfire 25 (IB25) & 252 (RIBF2)

These components and the heater with which they are installed shall be installed in accordance with:

- Manufacturer's Appliance Installation Instructions
- Current AS/NZS 5601 Gas Installations
- Local Regulations and Municipal Building Codes

These components must be installed, serviced and removed by an Authorised Person!

Only the flue system components specified in this installation instruction must be used. Components not specified in this installation instruction, whether manufactured by rinnai or otherwise, are not compatible and "must not" be used!

FLUE KIT CONTENTS

- ① Chimney Plate
- ② Chimney Cowl
- ③ Flexible Chimney Liner (5 Metres)
- ④ Transition Box
- ⑤ Guide Plate
- ⑥ Guide rails (x 2)
- ⑦ Bag of Fixing Materials:
 - A** Screw 8x10 Black (x 6)
 - B** Rivets (x 2)
 - C** Screw 8x5/8 Mush-head (x 1)

CONNECTING FLUE TO HEATER

Attach the guide rails ⑥ to the heater using the pre-drilled holes and four Screws 8x10 Black **A**.

Align the guide plate ⑤ with the guide rails ⑥ and slide the flue assembly, forward until the front tab of the guide plate ⑤ is fully forward and home, against the rear of the flange at the top of the heater engine main body **D**.

Ensure that the guide plate is then securely fastened with two Screws 8x10 Black **A** to the flue access plate **E**.

For further information regarding this product contact Rinnai Australia.

1300 555 545

(Cost of a local call, higher from mobile or public phones)

