

# Rinnai

## PIPE COVER INSTALLATION

CHECK THAT THE CORRECT PIPE COVER HAS BEEN CHOSEN FOR THE WATER HEATER MODEL YOU ARE INSTALLING


PC 11	
Infinity 16	REU-V1616W-AK ‡
Infinity 16FE Internal	REU-V1616WF-A
Infinity R1200	REU-V2018W-AK ‡
Infinity 20	REU-V2020W-AK ‡
Infinity 18	REU-2018W
Infinity 20	REU-2020W
Infinity 22	REU-2422W
Infinity 24	REU-2425W

PCV01	
Infinity 26	REU-V2626W-AK
HD200E	REU-V2632WC-AK *
Infinity 26 Internal	REU-V2632FFU-A
HD 200I	REU-V2632FFUC-A *
PCV02	
Infinity 32	REU-V3232W-AK
HD250E	REU-V3232WC-AK *
Infinity 32	REU-3203W-A

\* The Pipe cover is not available in the colour of the HD Water Heaters

### Installation.

1. Install Infinity and connections.
2. Remove the two screws (A) located on the lower side of the infinity.
3. Hold the pipe cover in the correct position and mark the position of the securing holes of the rear bracket.
4. Attach the bracket to the wall with suitable fixings.
5. Secure the pipe cover to the Infinity with the screws (A)
6. Secure the pipe cover to the bracket. (These holes are elongated to allow for uneven walls)

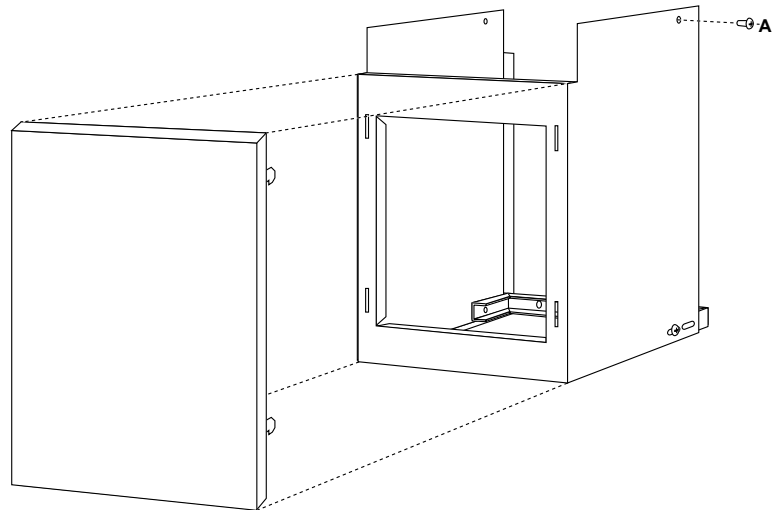

\*Check Data plate for Model No.

7. Fit the front panel

Pipe covers can be joined together to extend the length to cover pipes, to do this:

1. Install the first pipe cover to the Infinity as per the above instructions.
2. Repeat installation for each additional pipe cover, it will be necessary to mark and drill the hole (A) and screw to the above pipe cover.

**Models REU V1616W-AK, REU V2018W-AK & REU V2020W-AK may need to have the mounting holes drilled in the case of the water heater.**

Procedure for drilling holes in water heater case: **NOTE: Ensure power supply is isolated before drilling into appliance.**

1. Hold the pipe cover in the correct position and mark location of mounting screws (A) on the lower sides of the Infinity.
2. Carefully drill 3mm hole in side panel of Infinity to align with mounting holes already drilled in pipe cover. (Care must be taken to ensure drilling hole does not damage any components inside the Infinity)
3. Using a short self tapping screw, secure the pipe cover to water heater.

For Further assistance please call the **RINNAI Helpline: 1300 366 388**  
(Mon-Fri 8.00am to 5.30pm EST, Cost of a local call. Higher from mobile or public phones)

RINNAI AUSTRALIA PTY. LTD.  
ACN 005 138 769 ABN 74 005 138 769  
Head Office: 10-11 Walker Street, Braeside, VIC 3195.  
Tel: (03) 9271 6625 Fax: (03) 9271 6622