


Quick Start Guide


This insert is for reference purposes only, refer to the installation manual supplied with the appliance for full details. Wiring diagrams can change without notice, always refer to wiring diagram on the appliance. Must be installed, maintained and removed by authorised persons in accordance with AS/NZS 3000, all other relevant local regulations and municipal building codes including OH&S requirements.

ELECTRICAL WIRING


Outdoor Unit

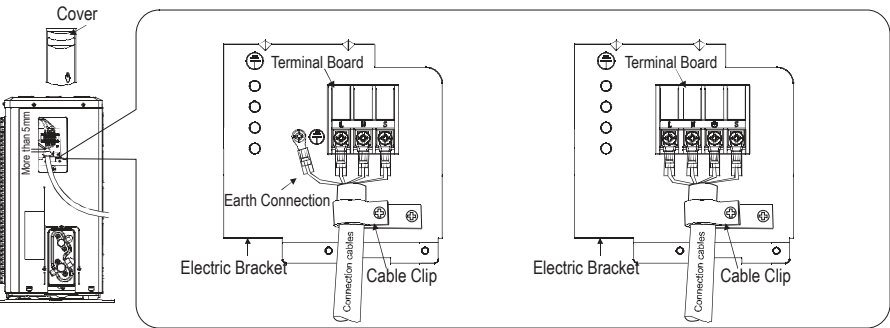

Indoor Unit

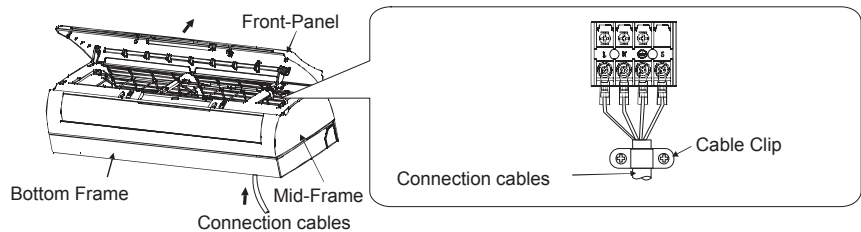

WIRING DIAGRAM

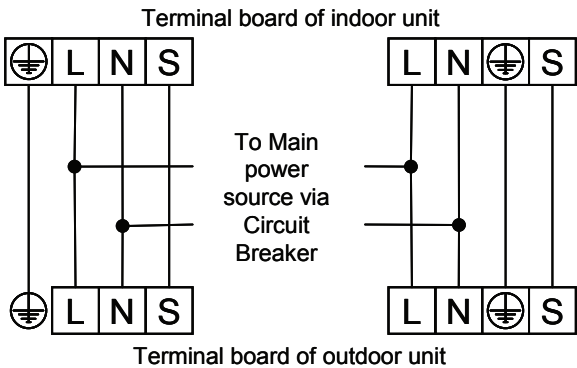

OPERATION TEMPERATURE RANGE

Mode	Indoor Temperature	Outdoor Temperature
Cooling	16°C~32°C	-12°C~47°C
Heating	18°C~32°C	-12°C~47°C

PIPE SIZE– Length - Elevation

Capacity (kW)	Pipe Size				Standard Length	Max. Length "X"	Max. Elevation "Y"	Additional Refrigerant
	GAS		LIQUID					
Units	mm	inch	mm	Inch	m	m	m	g/m
2.5 / 3.5	12.7	1/2	6.4	1/4	5	15	5	20
7.0	15.9	5/8	9.4	3/8	5	15	5	30

